

Matrix Steam Cleaner

GUIDE

- Quick Set Up Instructions
- Do's & Don'ts
- No Vacuum Suction? (Steam & Vacuum)
- Leaking Steam/O ring Change
(Steam & Vacuum – Steam Only/Steam Mop Kit)
- Replace Locking Clips on the Accessories
(Steam & Vacuum)
- Vacuum Hose –**IMPORTANT!!!** (Steam & Vacuum)

Quick Set Up Instructions

1. Unscrew the filter cap and carefully fill the tank water tank with water. (Do not add any kind of cleaning chemical to the water tank.)
2. Connect the 13A plug to the mains supply.
3. Connect rectangle plug on hose into the front of the machine ensuring the pin on the flap locates in to the top of the plug.
4. Connect round vacuum hose into the front of machine ensuring it clicks into place.
5. Turn the Power switch from '0' to '1' to start the machine. The Power indicator light will illuminate.
6. When the steam ready light on the front of machine illuminates, the machine is up to temperature. (Approx 6 minutes)
7. Before you start cleaning, direct the nozzle into a suitable container and press the trigger on the handle to blow out any excess water from the boiler. At this point the pressure will drop. Release trigger on the handle and wait approx 2 minutes. The machine will be ready to use when steam ready light has illuminated. Choose the accessory that you wish to use. Connect it to the steam hose by clicking into place.
8. Now direct the steam jet onto the surface you wish to clean and depress the trigger. To use the vacuum press the fan switch on the gun for the vacuum to begin.
9. As water in the boiler is used it is automatically replenished from the water tank until the tank is empty.
10. The tank level warning light and an acoustic signal will alert you that the water tank is empty and the steam will cease. **SWITCH THE POWER SWITCH TO '0'. REFILL WITH WATER AND CONTINUE FROM NO. 6.** (You will find the machine can be used immediately once switched back on) Please note that you don't have to wait for the water to become empty before refilling. This can be done at anytime.

Do's & Don'ts

DO - Read and understand user manual before carrying out any cleaning tasks

DO - Display Safety/Warning signs in the correct places

DO - Maintain the machine in accordance with instruction manual

DO - Ensure correct PPE is worn

DO- Check ALL O'rings are present, correct and lubricated (if required)

DO- Check hose is not damaged

DO- Check electrical cable prior to plugging in

DO- Ensure Vacuum bucket is on correctly

DO NOT- Use the machine if you are untrained

DO NOT - Point the steam at other electrical apparatus

DO NOT - Use the machine to clean the machine down

DO NOT - Hold or touch the steam outlet. This will be extremely hot.

DO NOT- Pull the machine by the hose

DO NOT- Use if O'rings are not present (Change or replace)

DO NOT- Use anything other than cold water in the water tank

No Suction on the Vacuum?



Locate the vacuum bucket on the machine



Ensure the lid is correctly on the vacuum bucket



Re-sit the vacuum bucket onto the machine

Steam Leaking from Machine

O ring Kit (SUBA15)



Steam leaking from the front of the machine



O rings maybe missing or damaged




Replace the 2 x O rings on the steam pin



Roll the second O ring over the top of the first one for ease



Check they are both positioned within the grooves of the pin

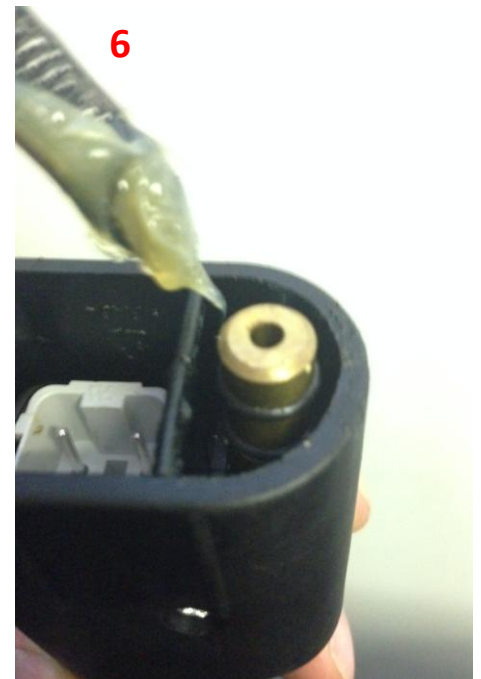

Grease the O rings on a regular basis to preserve the life and help with the removal from the machine

Steam Leaking from Hose Handle

Steam & Vacuum

O ring Kit (SUBA15)



Steam leaking from the hose handle



O ring maybe missing or damaged



Replace the O ring on to the steam pin



Check the o ring is positioned within the grooves on the pin



Grease the O rings on a regular basis to preserve the life and help with the removal of the accessories.

Steam Leaking from Hose Handle

Steam Only/Steam Mop Kit



Steam leaking from the hose handle



O rings maybe missing or damaged



Replace the 2 x O rings on to the steam pin



Check the o rings are positioned within the grooves on the pin



Grease the O rings on a regular basis to preserve the life and help with the removal of the accessories



You can change and grease the o rings on this accessory (elbow) in the same way

Replace Locking Clips on the Accessories

Steam & Vacuum




1
Locate locking clip on the extension tube



2
Un-clip by lifting at one edge




3
Discard Old and replace with new clips

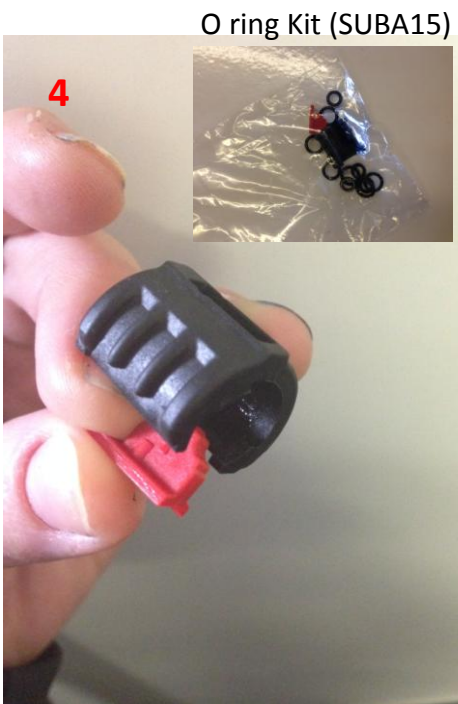

4
Push the red clip through the black clip.



5
Position the notch on the clip to the hole on the extension tube and re clip back on.

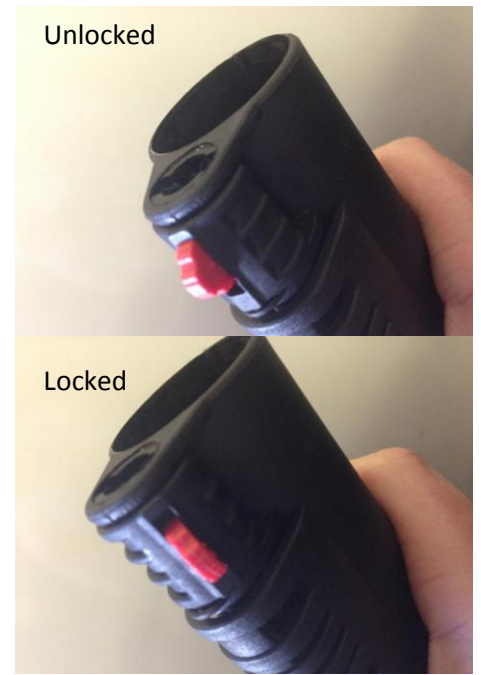

The two positions above are to lock the accessory to the extension tube. Ensure the clips are locked fully before use.

Hose – Correct Use

Steam & Vacuum



DO NOT PULL ON THE HOSE!!


The machines are too heavy and the hose will break.

This is the result of the hose if the hose is used to pull the machine around.

Please use the handle provided to manoeuvre the machine from one place to another




Ensure the hose is put in the machine correctly and not twisted.

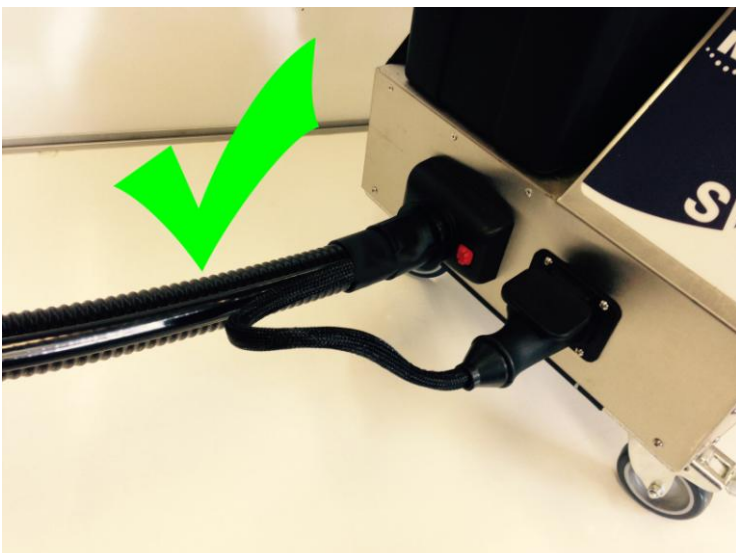

This will reduce the life span of the hose if correct care is not taken

Hose – Correct Use

Steam Only/Steam Mop Kit

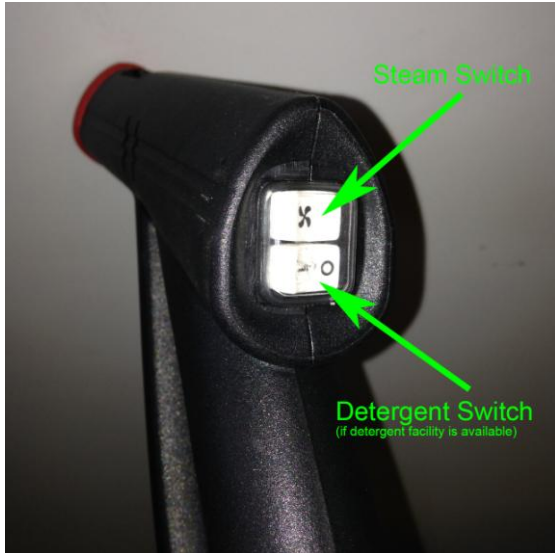


Once the machine has heated up.
Press the fan button on the hose handle to disperse the steam.



DO NOT PULL ON THE HOSE!!

The machines are too heavy and the hose will break.

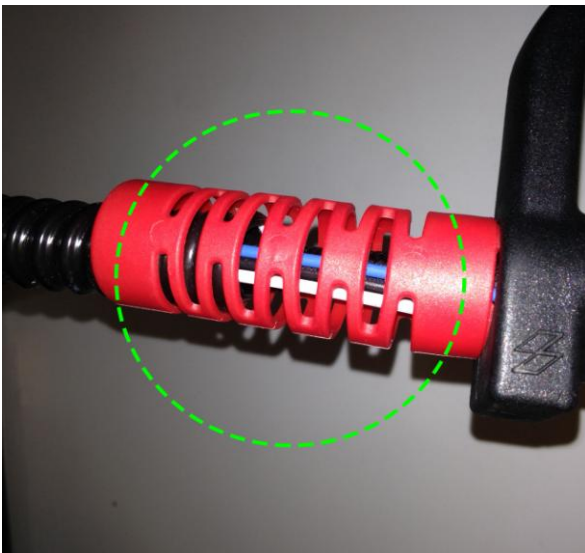

The wires will become visible at either end of the hose if it is used to pull the machine around. **DO NOT USE THE HOSE IF THE WIRES ARE VISIBLE!!**

Please use the handle provided to manoeuvre the machine from one place to another